


VP-15(P)

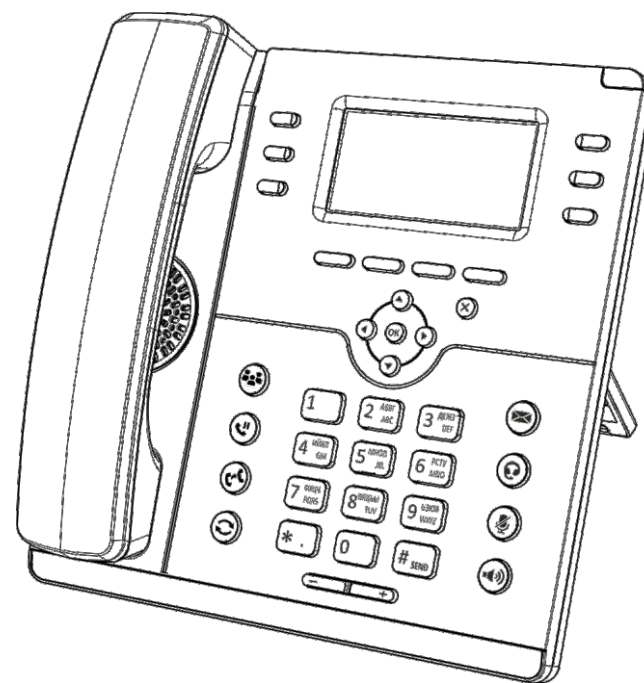

INTENDED USE

VP-15 and VP-15P IP phones are designed to be connected to a telephone network through the broadband access networks (Ethernet) via SIP.

SUPPLY PACKAGE



 
IP phone VP-15(P)



Handset



Headphones HP-12*
*(on request)



Adapter 5V 2A*
*(for VP-15P on request)




Handset cable




Cable for connection
to a local network


CONNECTING

Power supply through the adapter

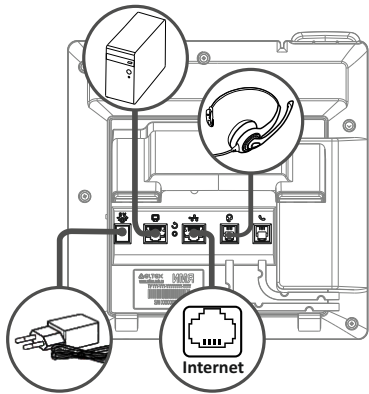

Power supply via
PoE technology (only for VP-15P).

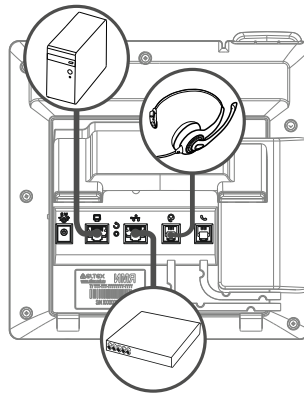

 Please, use the adapter included in the supply package of Eltex IP phone. Do not use another adapter, you might damage your phone.

LOADING

The loading of the phone system starts after connecting to the power supply. Perform the basic configuration after system loading.

BASIC CONFIGURATION

i Note: Before using, it is recommended to update the software. Different ways of software updating are given in the full user manual.


Obtaining an IP address:

Press the «menu» soft key. The IP address that your phone has obtained is displayed in «Status» submenu. If the IP address is displayed as 0.0.0.0, you need to configure networks parameters manually using the screen menu.

Basic configuration using screen menu

You can manage your phone using soft keys below the screen. The features of the keys are displayed at the bottom of the screen.

1. Press «menu» soft key
2. Move to «Network parameters settings» submenu:
Menu→Settings→System→Network→Ext. network
3. Configure the network parameters

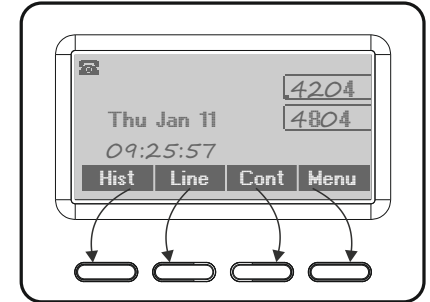

i Note: You can ask a network administrator for a list of network parameters with their values.

4. Move to «Account settings» submenu:
Menu→Settings→System→Accounts→Account 112
5. Configure the parameters of the accounts.

i Note: You may ask a network administrator or service provider for the list of account parameters and their values.

Basic configuration via web interface

1. Open a web browser, i.e. Firefox, Opera, Chrome.
2. Type the IP address of the phone in the URL bar of the browser.
In case of successful connection, a window to enter login and password is displayed.
3. Fill the fields and press «Log in». By default, login – **admin**, password – **password**.
4. If necessary, change network parameters on the tab: Network→Internet.
5. Configure VoIP parameters on the tab: VoIP→SIP accounts.

i Note: Make sure that a PC which you use for entering phone web interface is in the same local network as the phone you need to configure or there is a route between the networks. Please, consult an administrator of your network on the issue of phone connection.

OPERATING THE PHONE


Place a call


Basic

Option 1: Pick up the handset and dial a number. Wait for a ring back tone or press <Call> soft key.

Option 2: Dial a number, then pick up the handset.


Using the speakerphone

Option 1: While the handset is on-hook, dial a number. Press <Call> soft key or  button.

Option 2: Press  button, dial a number, then press <Call> soft key.


Exit the speakerphone mode:

Pick up the handset if it is on the cradle. The speakerphone will be automatically switched off.

If the handset is off-hook, press .

Answer a call



Do one of the followings to answer a call:

- Pick up the handset
- Press <Ans>
- Press 

You can ignore the call by pressing <Low>, or reject the call by pressing <Hang>.


Mute

With Mute enabled, you can hear other parties on a call but they cannot hear you.



Press  to enable the mode. If the mode is on, the MUTE indicator glows green, and the icon  is displayed on the screen.

Ending a call

Do one of the followings to end a call:

- Return the handset to its cradle (if you use the handset for the call)
- Press <Hang> soft key
- While using speakerphone press  (if the handset is on the cradle)



Hold a call

Press <Hold> soft key or  button to put an active call on hold. When the call is on hold, the icon  is displayed on the screen.

Transfer a call



Do one of the followings to transfer a connected call:

Option 1

1. Press  or <Tran> soft key.
2. Dial the number to which you want to transfer the call.
3. Press <Call> soft key.
4. When the recipient of the transferring call answers, notify him or her that you are transferring the call.
5. Press  or <Tran> soft key.



Option 2



1. Press  or <Tran> soft key.
2. Dial the number to which you want to transfer the call.
3. Press  or put the handset to its cradle.

Conference call

You can organize a 3-way conference when you have one active call and one call on hold.

- Press <Conf> soft key or  button.

If you have one active call and want another subscriber to join:

1. Press one of the following buttons: <Conf> soft key, <Hold> soft key,  or . Thus, you put the active call on hold.
2. Dial the number of the subscriber you want to join.
3. Wait for the answer.
4. Press <Conf> soft key.

The conference has been organized. The phone numbers of the subscribers are displayed on the screen.

TECHNICAL FEATURES

| | |
|--|--|
| VoIP protocols | |
| Protocols support | SIP |
| Audiocodecs | |
| Codecs | G.711a, G.711u, G.723.1, G.726, G.729 |
| LAN interface (Ethernet) parameters | |
| Number of ports | 1 |
| Connector | RJ-45 |
| Data rate, Mbps | 10/100, autonegotiation |
| Standards support | BASE-T |
| PC interface (Ethernet) parameters | |
| Number of ports | 1 |
| Connector | RJ-45 |
| Data rate, Mbps | 10/100, autonegotiation |
| Standards support | BASE-T |
| Management | |
| Remote management | web interface, Telnet, SSH, TR-069 |
| Access rights limitations | by password |
| Common parameters | |
| Power supply | <ul style="list-style-type: none">• adapter 5 V DC, 2 A (for VP-15P on request)• PoE IEEE 802.3af (only VP-15P) |
| Power consumption | no more than 4 W (maximum current consumption 0.8 A) |
| Operating temperature | from +5 to +40°C |
| Operating humidity | up to 80% at 25°C |
| Dimensions | 205x86x210 mm |
| Weight | no more than 0.83 kg |

Eltex Ltd. guarantees the compliance of VP-15(P) IP phone with technical requirements RPLT.465600.161TU (П/ЛТ.465600.161ТУ) in case the user follows operating rules specified in this manual.

SAFE OPERATION RULES

- Do not install the phone near sources of heat.
- The phone should be kept away from direct sunlight. Do not expose the device to moisture or dust.
- Do not open the phone case.
- Equipment shipping and storage should be carried out in accordance with GOST 15150 (ГОСТ 15150) Conditions 5 and Conditions 1 respectively.

Duration of warranty: 1 year. Date of issue is on the package.



At the end-of-life, please, do not throw the device away with household rubbish. The device should be brought to a special collection station for electric and electronic devices. You can ask local authorities for the information on collection stations location.

TECHNICAL SUPPORT

For technical assistance on the issues related to operation of Eltex Ltd. equipment, please contact the Service Center:
Russian Federation, 630020, Novosibirsk, Okruzhnaya st., 29V.

E-mail: techsupp@eltex.nsk.ru

Visit the Eltex Ltd. website to find technical documentation and firmware for our products or consult Service Center engineers:



- **Official website:** eltex-co.com
- **Files storage:** eltex-co.com/support/downloads